

CLAMP ON POWER HITESTER 3169-20, 3169-21

Power Measuring Instruments





- Power recording for individual waveforms
- Simultaneous recording of demand values and harmonics
- POWER MEASUREMENT SUPPORT SOFTWARE 9625

The photo shows the 3169-21 combined with CLAMP ON SENSORS 9661 and 9669 (optional) for measuring two systems.

The 3169-20/21 can also be used in combination with CLAMP ON SENSORS (optional) rated up to 5000 A.

Offering a new approach to energy-related measurement

such as energy conservation, ISO14001 testing, equipment diagnosis, and harmonics measurement.

Measures power lines of up to 254 mm in diameter

FLEXIBLE CLAMP ON SENSOR CT9667

CLAMP ON POWER HITESTERs are 3169-20 and 3169-21 that allow measurement of single-phase to three-phase 4-wire circuits with a single unit. In addition to measuring standard parameters such as voltage, current, power, power factor, and integrated values, these clamp-on power meters can simultaneously perform demand measurements required for carrying out power management and energy-saving measures, as well as harmonic measurements. The two new power meters also feature PC card data storage, and come equipped with an RS-232C interface for PC communications. Further, with greater data processing speeds, it is possible to measure the power of just a few cycles, enabling more detailed and effective energy-saving measures for equipment. The 3169-20 and 3169-21 are ideal for users who want to achieve close control over energy-saving management activities and measures.











Features

Measure power lines of up to four systems (with a common voltage)

One single unit can measure four circuits (single-phase 2-wire), two circuits (3-phase, 3-wire), or a one circuit (3-phase, 4-wire)system.

■ A wide range of measurement functions

The **3169-20/21** can simultaneously measure voltage, current, power (active, reactive, and apparent), integrated power, power factor, and frequency. Further, when using 3-phase, 3-wire (3P3W2M) mode, you can display the voltage and current for all three lines by measuring just two of them. When using the 3-phase, 4-wire (3P4W4I) mode, neutral line current can be displayed using 4 current measurement.

■ Equipped with ranges from 0.5 A to 5000 A

The power meters support seven types of clamp-on current sensors to enable measurement for a variety of items, from CT terminals to large current and thick power lines.

Supports high-speed data storage from individual waveforms

When using the standard mode to perform integrated power measurement, you can store data in intervals starting from one second, and when simultaneously measuring integration and harmonics, in intervals starting from one minute. When in the fast mode, you can store RMS data for individual waveforms.

PC Card compatible plus internal hard drive for extra memory

Store valuable measurement data in convenient PC cards. The internal memory (1 MB) supports measurement over extended periods and detailed measurement parameters.

■ Housed in a compact A5 body size

The **3169-20** and **3169-21** feature a compact design that makes them portable and easy to use in tight spaces, and are approximately 30% more compact than the **CLAMP ON POWER HITESTER 3166**.

■ Multi-language Compatibility

Select from nine languages, including Japanese and English.

Detect incorrect connection using vector diagrams

Use the vector display on the connection confirmation screen to check the phase, whether a connection is loose, or whether the clamp-on sensor connection has been reversed during VT/CT terminal measurement.

Polarity display and measurement using the reactive power measurement method

The units come equipped with a polarity display for checking LAG/LEAD when measuring power factor or reactive power. Further, you can select the reactive power measurement method, or display the phase factors for RMS values and power comparison.

■ High-speed D/A output

The **3169-21** comes equipped with 4-channel high-speed D/A output to enable analog output of RMS values for individual waveforms.

■ Ideal for power and harmonics management

The power meters come equipped with a harmonics measurement function that supports measurement of 3-phase power lines. They can also perform simultaneous measurement of harmonics and demand values, enabling both power and harmonics management.

The ultimate in clamp-on power meters!



The photo shows the 3169-21 with D/A output.



D/A output terminal pin placement

Use the **CONNECTION CABLE 9441** to connect to external devices. (Output resistance: 100Ω)

Pin	Signal name
1	D/A output ch1
2	D/A output ch2
3	D/A output ch3
4	D/A output ch4
5 to 8	CND







External I/O terminal pin placement

Pin	Signal name	Pin	Signal name
1	Start/stop input	4	Data storage input
2	Free	5	GND
3	Status output		

Use the CONNECTION CABLE 9440 to connect to external devices.

Range Configuration Table

		CLAMP ON SENSOR 9695-02 (CAT III 300V)		CLAMP ON SENSOR 9661 (5A, 10A, 50A, 100A, 500A)				
	Current		A, 10A, 50A)	(3A, 10A, 30A, 100A, 300A)			looA)	
			ENSOR 9694 (500mA, 1A, 5A)			SENSOR 966 300V) (5A, 10A, 50		
Voltage \	Connection	500.00mA	1.0000A	5.0000A	10.000A	50.000A	100.00A	500.00A
	Single-phase 2-wire	75.000 W	150.00 W	750.00 W	1.5000kW	7.5000kW	15.000kW	75.000kW
150.00V	Single-phase 3-wire Three-phase 3-wire	150.00 W	300.00 W	1.5000kW	3.0000kW	15.000kW	30.000kW	150.00kW
	Three-phase 4-wire	225.00 W	450.00 W	2.2500kW	4.5000kW	22.500kW	45.000kW	225.00kW
	Single-phase 2-wire	150.00 W	300.00 W	1.5000kW	3.0000kW	15.000kW	30.000kW	150.00kW
300.00V	Single-phase 3-wire Three-phase 3-wire	300 00 W	600.00 W	3.0000kW	6.0000kW	30.000kW	60.000kW	300.00kW
	Three-phase 4-wire	450.00 W	900.00 W	4.5000kW	9.0000kW	45.000kW	90.000kW	450.00kW
	Single-phase 2-wire	300.00 W	600.00 W	3.0000kW	6.0000kW	30.000kW	60.000kW	300.00kW
600.00V	Single-phase 3-wire Three-phase 3-wire	600 00 W	1.2000kW	6.0000kW	12.000kW	60.000kW	120.00kW	600.00kW
	Three-phase 4-wire	900.00 W	1.8000kW	9.0000kW	18.000kW	90.000kW	180.00kW	900.00kW

	Voltage Connection		CLAMP ON SENSOR 9669				
Voltage			200.00 A	1.0000kA			
	Single-phase 2-wire	15.000kW	30.000kW	150.00kW			
150.00V	Single-phase 3-wire Three-phase 3-wire	30.000kW	60.000kW	300.00kW			
	Three-phase 4-wire	45.000kW	90.000kW	450.00kW			
	Single-phase 2-wire	30.000kW	60.000kW	300.00kW			
300.00V	Single-phase 3-wire Three-phase 3-wire	60.000kW	120.00kW	600.00kW			
	Three-phase 4-wire	90.000kW	180.00kW	900.00kW			
	Single-phase 2-wire	60.000kW	120.00kW	600.00kW			
600.00V	Single-phase 3-wire Three-phase 3-wire	120.00kW	240.00kW	1.2000MW			
	Three-phase 4-wire	180.00kW	360.00kW	1.8000MW			

	Cumont	FLEXIBLE CLAMP ON SENSOR CT9667			
Voltage	Current Connection	500.00 A	5.0000kA		
	Single-phase 2-wire	75.000kW	750.00kW		
150.00V	Single-phase 3-wire Three-phase 3-wire	150.00kW	1.5000MW		
	Three-phase 4-wire	225.00kW	2.2500MW		
	Single-phase 2-wire	150.00kW	1.5000MW		
300.00V	Single-phase 3-wire Three-phase 3-wire	300.00kW	3.0000MW		
	Three-phase 4-wire	450.00kW	4.5000MW		
	Single-phase 2-wire	300.00kW	3.0000MW		
600.00V	Single-phase 3-wire Three-phase 3-wire	600.00kW	6.0000MW		
	Three-phase 4-wire	900.00kW	9.0000MW		

Note 1:The range configuration table displays the full-scale display values for each measurement range. Note 2:In the table, "unit W" has been replaced with "VA" or "var" for the apparent-power and reactive power measurement ranges. Note 3:Voltage and current input values 0.4% or less than the measurement range are displayed as "zero". When either the voltage or current for the power line is zero, the power value is displayed as zero. Note 4:You can display measurement values up to 130% of each measurement range.

Measure hidden power waste through secure connections, simple measurement methods, and detailed data capture.


Promises reliable measurement for power demand requirements!

Select from a variety of data, including detailed and harmonics data for multiple circuits

★ To measure multiple systems simultaneously

A single unit can measure two three-phase, 3-wire systems. Further, you can make individual clamp-on sensor and current range settings for each system.

Also, in addition to performing simultaneous measurement for up to four systems (single-phase, 2-wire) with a common voltage, you can set the current range individually for each system. Setting the most suitable current range for both large and small loads allows you to acquire more accurate

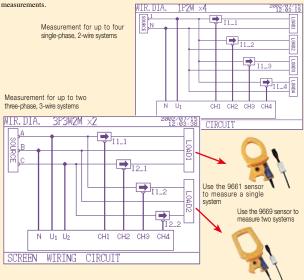

★ Magnetic voltage adapters for hard-to-clip terminals

New magnetic voltage adapters convertible with the Voltage Cords L9438-53 let you accurately detect voltage when the circuit terminals are too shallow for alligator clips to latch on.






★ Simultaneous power and harmonics management

Use a single unit to simultaneously measure data for power and harmonics.

All acquired data can be saved onto a PC card.

Power data (including demand data) and harmonics data can be simultaneously saved onto a PC card or in the unit's internal memory. Further, data for all of the systems being measured can be saved when measuring multiple circuits. Each of these two new unit's offers a management system for power and harmonic quality.

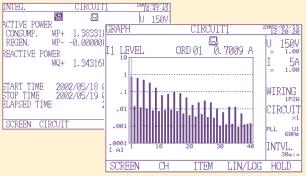

★ When measurement accuracy is crucial


The addition of a vector display for viewing the connection status completes the preparation required for measurement.

Have you ever experienced incorrect measurement results?

The most common cause of incorrect data is a faulty connection. With the 3169-20/21 you can use the vector display to check the phase, whether a connection is loose, or whether the clamp-on sensor

Also, you are assured of proper connection when measuring the VT (PT)/CT terminals even if you

cannot see the line you are measuring

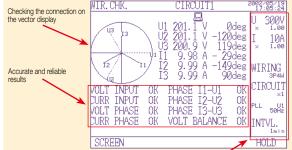


The basic settings are constantly displayed, allowing you to measure with confidence.

During measurement, in addition to displaying the voltage and current ranges, and VT (PT) and CT ratios for each system, the unit can also display items such as the measurement interval. Because the basic settings are constantly visible, you can be confident of obtaining the correct measurement

★ Capture facility data quickly

By using continuous processing to measure individual waveforms, you can accurately measure data in a relatively short amount of time.

Use the desired measurement method to continuously measure the voltage, current, and power for individual waveforms, enabling you to obtain accurate data in one second or less. Further, you can record the maximum, minimum and average values

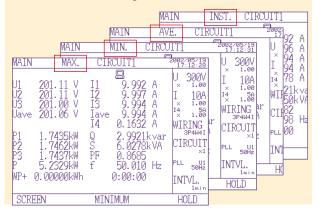

★ Measure another device simultaneously

Using the external I/O function, you can obtain even more detailed measurements for energy conservation.

In addition to measurement start/stop control through external input, you can use this function to output the measurement start/stop signal for the 3169-20/21. Simultaneous recording of a variety of signals is also possible for equipment when using multiple devices to perform start control and



Large storage capacity to accommodate power and harmonics data for individual waveforms. Supports energy saving measures that can be carried out from your PC.

Greater flexiblity for energy saving measures through detailed measurement!

Reduce energy consumption by "1%"! Why not try analyzing your energy saving measures?

★ Save measurement details to PC card for extended measurements!

Why not try a shorter data management interval?

With the 3169-20/21, you can set the data recording interval to 1 minute. If you are unsure how to proceed with energy conservation, you can use a large capacity PC card to save measurement details, then use the data to create a load fluctuation graph and analyze this to help reduce wasted power consumption.

Further, because you can save a variety of data, including simultaneous recording of power and harmonics data, waveform data storage, and print-outs of the screen, these two new units help by storing measurement details.


Measurement conditions: 1-minute recording interval, when using a PC card (512 MB) 1P2W x 4 1P3W x 2 3P3W2M x 2 3P3W3M,3P4W 365 days 340 days 160 days 180 day 145 days 240 days 1P3W × 2 3P3W2M x 2 180 days (6 days) 160 days (6 days) 145 days (5 days) 240 days (7 days) 365 days (12 days) 320 days (13 days) 300 days (9 days) 365 days (15 days) 365 days (30 days) 365 days (32 days) 365 days (24 days) 365 days (38 days) 365 days (60 days) 365 days (64 days) 365 days (48 days) 365 days (76 days) 15 minute: 365 days (90 days) 365 days (100 days) 365 days (74 days) 365 days (114 days 30 minutes 365 days (184 days) 365 days (200 days) 365 days (150 days) 365 days (230 days) ent conditions: When saving all items using normal measurement, the number of days in parentheses indicate normal measurement maximum measurement period of one year

★ Identify even small amounts of power waste using individual waveform measurements

The 3169-20/21 can help turn you into a keen energy saving specialist.

These two new units allow you to measure power data by recording the RMS values for individual waveforms.

By measuring just a few seconds of machine cycles or changes in operating patterns of facilities such as manufacturing equipment, you can grasp power fluctuations over a relatively short amount of time and view improvements in the form of numerical data. Gain unsurpassed energy savings by achieving simple improvements around the work environment.

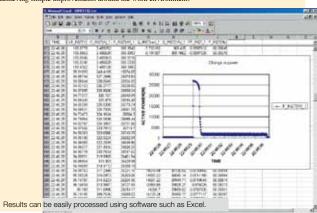


★ Improve energy-saving operations and create an energy-efficient facility

Why not try to improve your energy-saving measures using the 3169-21?

Using the D/A output (4 ch) function on the 3169-21, you can simultaneously record a variety of measurement and control signals for equipment, such as the power fluctuation and temperature/flow for individual waveforms, onto a HIOKI MEMORY HICORDER or logger.


A slight reduction in power consumption due to changes in the inverter motor operating patterns or temperature settings equals to an energy-saving effect.

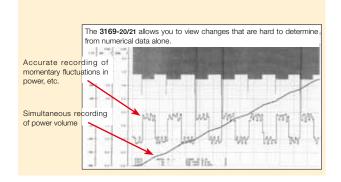

★ Unbalanced loads are an enemy to energy saving activities. Solve your problems with careful management of power lines.

Unbalanced 3-phase loads can result in a damaged power line.

To provide detailed management of measurements, the 3169-20/21 displays voltage and current for all three lines even when measuring just two circuits (3P3W2M). Further, because the effective power for each phase is displayed based on a virtual center point when measuring the voltage and current for all three lines (3P3W3M), the units can also be used to implement energy saving measures and power management systems.

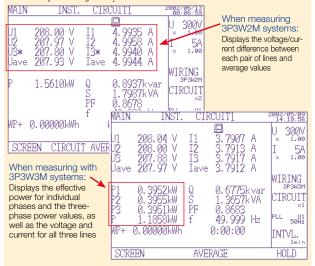

★ Harmonics cause wasted power

Did you think that harmonics and energy saving activities were unrelated?

Due to a spread in equipment that uses semiconductor control devices, such as inverters, power quality has decreased. Also, power consumed in harmonic components is all wasted power. Harmonic control and management are essential for energy conservation.

You can switch channels to easily check the harmonics for each circuit

★ To identify causal factors with harmonic measurements of multiple systems circuits


If production equipment malfunctions, power is wasted if repeated manufacture results in defective products again.

If you think harmonics are causing malfunctions, you can simultaneously measure the harmonics of individual circuits using multi-circuit measurement to obtain detailed information about the occurrence of harmonics along with the current direction for each phase. Using the 3169-20/21 you can accurately determine the relationship for harmonic inflow and outflow between power lines by analyzing the data acquired simultaneously, and then devising energy-saving measures based on the cause of the occurrence.

POWER MEASUREMENT SUPPORT SOFTWARE 9625

■Graphically process measurement data from Model 3169-20/21 easily on a PC!

The POWER MEASUREMENT SUPPORT SOFTWARE 9625 application provides easy graphical processing on a computer of measurement data saved on CLAMP ON POWER HITESTERS 3169-20/21 and 3166.

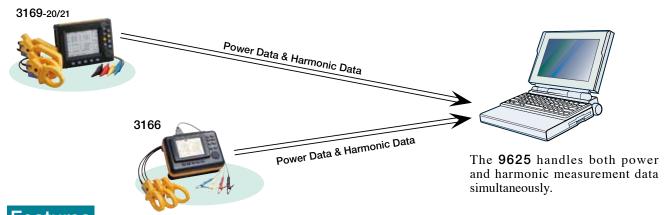

Features

■ Time Series Graph Display Function

Measurement data can be displayed as a time series graph. Demand data measured in different series can be overlaid on the display.

■ Summary Display Function

Measurement data can be displayed directly in table form.

■ Daily, Weekly and Monthly Report Display Function

Daily, weekly and monthly reports of demand data can be displayed.

■ Harmonic Analysis Function

Display harmonic measurement data as a graph, list or waveform. (Also compatible with the harmonic measurement data captured by Model **3166**.)

■ Print Function


Each screen can be printed.

Easily display and print various screens such as graphs and spreadsheet tables

Step 1. Load measurement data

Load up to 16 data sets from the 3169-20/21 or 3166 at once. Measured numerical values and waveform data are recognized and displayed automatically.

- 1. Loading and deleting data, and changing data names, can be done easily.
- Multiple sets of measurement data can be loaded and managed in a single file.

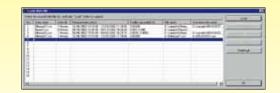

Step 2. Select the display (screen) type

Select from time series graph, summary, daily, weekly or monthly report, harmonic list, harmonic graph, harmonic waveform or settings.

Step 3. Select display items (two-axis display is possible)

- Select the data items (up to 16) to display.
 For graph displays, the type of graph (line or bar) can be selected.
- 2. Enter details for data display. (data item names, levels, etc.)

Step 4. Set the start/stop times and data interval to be displayed

- 1. Set the data period to display. (start/stop time and data interval)
 - The displayed period can be easily changed by scrolling.



■ Time Series Graph Display Function (two-axes display possible)

■ The displayed graph can be set to suit particular start/stop times and data intervals. Harmonic time series graphs can be displayed.

Convenient Functions

- The horizontal (time) axis can be easily scrolled to show the desired range.
- (2) Upper and lower limits (measurement values) of the vertical axis can be easily set and changed.
 - * Graph type (line, bar or stacked bar), line type (such as solid or dashed), color and details of upper and lower numerical values can be set.
- (3) Any desired numerical data value on a graph can be confirmed and displayed by cursor movement.
- (4) The display can be switched between 2D and 3D graphs.

Upper/Lower Limit Setting Slider

■ Summary Display Function

Summary

Displays a summary of the data values between specified start/ stop times, at the specified data interval.

Convenient Functions

- In addition to measurement values within the period being displayed, the summary shows period, maximum, minimum and average values.
- (2) Measurement data names and measurement units can be edited in the summary.

Daily, Weekly or Monthly Report Display


 Displays a summary covering the total values in daily, weekly or monthly reports.


Convenient Functions

- (1) The time axis for each total scrolls to easily change the totalized period.
- (2) The total time range of measurement data can be totalized in up to four sections per time period.





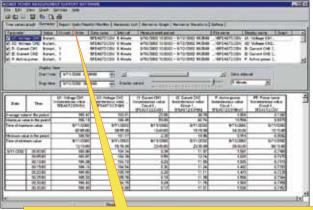

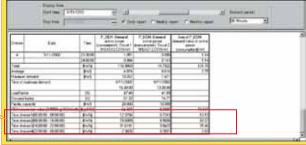

■ Harmonic Display Function Harmonic data measured by the 3169-20/21 and 3166 can be displayed in various ways

Harmonic Time Series Display


 While displaying a time series graph, select the harmonic item for the vertical axis to display a time series graph of harmonics.

Convenient Functions

- Up to 32 graphs can be displayed simultaneously using 2-axes display.
 - For one circuit measurement, up to 32 orders can be graphed. Using multiple instruments, time series of harmonics can be easily compared.
- Any desired chronological detail can be easily confirmed using the cursors on the graph.


Harmonic List Display

Displays harmonic data for the selected display item as a list.

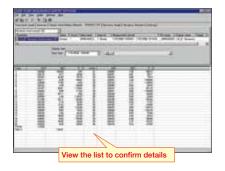

Harmonic Graph Display

■ Displays harmonic data for the selected display item as a bar graph.

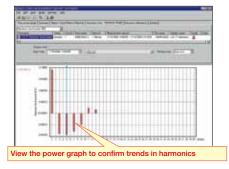

Harmonic Waveform Display

 Displays the voltage and current waveforms upon which harmonic data is based.


harmonics!

Simultaneously display multiple

orders to confirm changes in


Simultaneously display data from multiple instruments to confirm

concurrent series of harmonics!

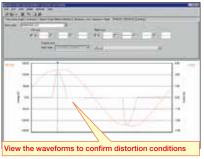

■ Settings Display Function

When you select a data name to be load, the measuring instrument model and setting conditions at measurement time are displayed. Measurement data and measurement conditions can be managed at the same time.

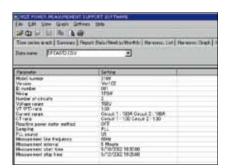


■ Print Function

Reports and screen copies of the displayed screen can be easily printed.

Convenient Functions

- (1) Printing results can be confirmed by print preview.
- (2) When creating a report, screen data can be copied and pasted into a commercial word processor program.

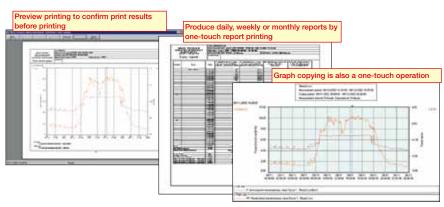

9625 Specifications

■ General Specifications

Supported instrument : 3169-20, 3169-21 and 3166(CLAMP ON POWER HITESTERS)

Operating environment

: Computer: PC-AT compatible (DOS/V machine)

CPU: Pentium 200 MHz or higher Memory: 128 MB or more (recommended)

Hard disk: 128 MB or more free space Display: XGA (1024×768) or higher Disc device: CD-ROM drive (for installation) Operating system: Windows 2000, XP, 7 (English edition) Supplied Media : One CD-R disc

■ Functional Specifications

[Data/Setting Load/Save Functions]

	·9aa, -a · a			
	Loading data /Setting	File extension	Data format	Data contents
	Data file	CSV	csv	Instantaneous value, average value, maximum value, minimum value, integrated value, demand value, harmonic
3169-20/21	Waveform data file	WUI	Binary	Instantaneous waveform
	Short-interval data file	BIN	Binary	Instantaneous values
	Integrated measurement data file	ITG	CSV	Instantaneous value, integrated value
	Demand measurement data file	DEM	CSV	Instantaneous value, maximum value, minimum value, demand value
3166	Harmonic measurement data file	HRM	CSV	Instantaneous value, average value, maximum value
	Waveform data file	WUI	Binary	Instantaneous waveform
	Setting file	SET	-	
9625	Combined file	DAT	Binary	

	Saved data /Setting	File extension	Data format	
9625	Combined file	DAT	Binary	

setting

display

Maximum data capacity: Up to 528 MB per data set (total composite data up to 1.5 GB)

Time Series Graph Display Function]

Graph display item

Y-axis upper/lower

Voltage, current, active power, reactive power, apparent power, power factor, frequency, Integrated value(active power, reactive power), demand, harmonic (level, content ratio, phase angle, total value, THD) The display position (upper and lower display limits) of the vertical

(Y) axis of a graph can be set by scroll bar or by specifying values. Interval setting Select each cycle, or 0.1, 0.2, 0.5, 1, 2, 5, 10, 15 or 30 sec.; 1, 2, 5, 10, 15 or 30 min.; or 1, 2, 3, 4, 6, 8 or 12 h; or 1 day

An optional analysis period can be specified from the overall measurement data period Display period range setting

(1) Analysis start date and time (YMD, HMS) is specified numerically (2) Analysis stop date and time (YMD, HMS) is specified numerically Display of measurement data period (measurement start and stop date and time)

Reference value setting : Display set standard value Graph type selection

Line, bar, 2-axes and 3-dimensional Graph line type & color Line type and display color can be set for each data set, and marker display is possible

Stacked bar graph : Up to 16 types of data series (demand value, demand quantity) can be displayed in an overlay graph

Cursor measurement Measurement values can be displayed by the cursor Data display units setting : Engineering units (m, k, M, G, etc.) can be selected

[Summary Display Function]		
Display item selection Daily, weekly and monthly report display Load factor calculation display Independent time range totalizing CO ₂ conversion display	: :	Select the items to display in the summary Displays a report for the specified daily weekly or monthly period Calculates the load factor and demand factor as a daily, weekly or monthly report, and displays the results Specify up to four time ranges and totalize data for each time range independently Display the integrated active power (kWh) in CO2 according to the conversion rate.
[Harmonic Display Function] Waveform display List display Graph display Cursor measurement	:	Displays waveform data for a specified time Displays a list of harmonic data for a specified time Display a bar graph of harmonic data for a specified time Displays the value at the cursor with waveform and graph displays
[Setting Display Function] Setting display	-:	Displays a list of the setting conditions Loads setting conditions from a data file (3169-20/21) Loads setting conditions from a settings file (3166)

[Copy Function]	
	Each display can be copied to the clipboard
Copies to the clipboard :	Each display can be copied to the chipboard
[Daint Franchica]	
[Print Function]	
Printing a displayed time :	Previews and prints the contents displayed on a time series graph
series graph	
Printing a displayed :	Previews and prints the contents displayed in a summary
summary	
	Previews and prints the contents displayed in a harmonic
•	
	spreadsheet
Printing the settings :	Previews and prints the contents displayed in the settings
display	display
Comment entry :	Text comments can be entered in any printout
	Any color or monochrome printing supported by the operating
	system
[Display Language]	system
Language :	English
[CSV Format	
Conversion Function]	
•	Time-series graph; Summary; Daily, Weekly and Monthly
	Report; Harmonic Waveform
	Report, marmonic waverorni

■ 3169-20/21 Specifications

■ Basic Specifications

Measurement line type :	Single-phase 2-wire, single-phase 3-wire, three-phase 3-wire, and
•	three-phase 4-wire systems (50/60 Hz)
Number of systems :	
that can be measured	Single-phase: 1P2W 4 systems
(for systems that share	1P3W
the same voltage)	Three-phase: 3P3W2M (measures the voltage and current for two lines) 2 systems
	3P3W3M (measures the voltage and current for all three lines) 1 system
	3P4W (measures the voltage and current for three lines)
	3P4W4I 1 system
	(measures the voltage for three lines and the current for four lines)
Item :	Voltage, current, active power, reactive power, apparent power,
	power factor, integrated value, frequency, harmonics
Measurement range :	For the voltage, current, and active power ranges, see the range
	configuration tables on page 2.
Measurement method :	Simultaneous digital sampling of voltage and current, PLL synchronization
	or a fixed clock (50/60 Hz)
Input methods :	Voltage: Isolated input
	Current: Isolated input using a clamp-on sensor
Effective measurement area :	Within 5 to 110% of the range
Total display area :	Voltage and current: Within 0.4 to 130% of the range
	(zero is suppressed for less than 0.4%)
	Power: Within 0 to 130% of the range
	(zero is suppressed when the voltage or current is zero)
	Harmonic level: Within 0 to 130% of the range
Display :	5.7-inch LCD (320 × 240 dots), with backlight
Range switching method:	Manual (the current range can be set for each system)
Display update rate :	Approx. every 0.5 seconds
	(except when using a PC card while accessing the internal memory, or when performing RS-232C communications
Input resistance :	Voltage: $2.0 \text{ M}\Omega \pm 10\%$ (differential input)
(50/60 Hz)	Current: $200 \text{ k}\Omega \pm 10\%$
Maximum input :	Voltage input: 780 Vrms AC, peak value: 1103 V
	Current input: 1.7 Vrms AC, peak value: 2.4 V
Maximum rated voltage to earth :	Voltage input terminals: 600 Vrms AC (50/60 Hz)
Crest factor :	Voltage: Less than 2 (for full-scale input)
	Current: Less than 4 (for full-scale input. However, less than 2 for the 500 A, 1 kA, and 5 kA ranges
Internal memory capacity :	1MB

■ Display Specifications _

	-
Instantaneous value : display	Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current, (average
Average value display :	values are for each system) Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current
Maximum/minimum : value display	*The average value from the beginning of time series measurement until the present. Voltage, current, active power, reactive power, apparent power, power factor, frequency
Integrate display :	*The maximum/minimum value from the beginning of time series measurement until the present. Integrated value Active power (consumption/regeneration) Reactive power (lag/lead)
Demand volume display : (Integrated value within the specified interval)	*The integrated value within each specified interval (latest value).
Demand value display : (average value within the specified interval)	Active power (consumption), reactive power (lag), power factor *The demand value within each specified interval (previous value).
Maximum demand value display : (average value within the maximum specified interval)	The maximum demand value since the beginning of time series measurement and the time and date it occurred.
Harmonics list :	List of the items measured for the specified harmonic (numerical value). (including the total value and total harmonic distortion factor (THD-F/THD-R))
Harmonics graph :	(uncloud gue toda value and toda harmonic custoffun factor (InD-F1 InD-F1) Bar graph or vector diagram of the items measured for the specified harmonic. (cursor measurement, magnification update, with a linear/LOG axis selection function)
Waveform display :	Voltage and current waveforms (with a magnification update function)
Measurement value : enlargement display	Select and enlarge up to 5 items from the instantaneous value display.

■ Measurement Specifications

[Voltage/current measurement] : Measurement method : Measurement display :	True RMS method Measurement of three voltage lines and 3 or 4 current lines is possible when using three-phase 3-wire and three-phase 4-wire systems
[Active power measurement] Measurement display : Polarity display :	For three-phase 3-wire (the 3P3W3M setting), refer to the display for phase power values. For consumption: no symbol, for regeneration: "-"
Reactive power measurement] Using the reactive : power measurement method Polarity display :	ON: Measures the reactive power directly using the reactive power measurement method OFF: Calculates the reactive power from the measurement values for voltage, current, and active power For lag phase (LAG: current is slower than voltage): no symbol For lead phase (LEAD: current is faster than voltage): "-" (Reactive power measurement method "ON")
[Apparent power measurement] Polarity display :	No polarity
[Power factor measurement] Measurement range : Polarity display :	-1.0000 (lead) to 0.0000 to +1.0000 (lag) For lag phase (LAG: current is slower than voltage) :no symbol For lead phase (LEAD: current is faster than voltage) : "-"
[Frequency measurement]	40.000 to 70.000 Hz Within 10 to 110% of the range (for sine wave input) Voltage U1

[Frequency measurement]				
Measurement range :	40.000 to 70.000 Hz			
Input area for	Within 10 to 110% of the range (for sine wave input)			
guaranteed accuracy				
Measurement source :	Voltage U1			
[Integrated measurement] .				
Measurement range :	Active power : 0.00000 mV	h to 99999.9 GWh consumption		
	-0.00000 mV	h to -99999.9 GWh regeneration		
	Reactive power: 0.00000 mv	arh to 99999.9 Gvarh lag		
	-0.00000 mv	arh to -99999.9 Gvarh lead		
Measurement display :	Active power : Displays cor	sumption and regeneration separately		
	Reactive power: Displays lag and lead separately			
[Harmonic measurement] .				
Measurement range :	Basic wave frequency: 45 to 66	Hz		
Measurement method	PLL synchronization			
	Up to the 40th order			
Window width :	A single cycle (number of data	points analyzed: 128 points)		
	Rectangular			
	1/16 cycles			
Item for analysis :	Harmonic level:	The voltage, current, or power level for		
		each harmonic order		
:	Harmonic content percentage:	The voltage, current, or power		
		content percentage for each harmonic order		
;	Harmonic phase angle:	The voltage, current, or power phase		
		angle for each harmonic order		
;	Total value:	The total value for voltage, current, or		
		power up to the 40th harmonic order		
	Total harmonic distortion factor: For voltage or current			
		(THD-F or THD-R)		

■ Setting Specifications _

_ = ===================================	P		
[Setting contents]		[Data output item]	
Measurement line settings :	1P2W, 1P3W, 3P3W2M, 3P3W3M, 3P4W, 3P4W4I	Instantaneous values :	Voltage, current, active power, reactive power, apparent power,
Clamp-on sensor settings :	9694, 9660, 9661, CT9667(Choose the "9667" setting when using the		power factor, frequency, average voltage, average current, (average
	CT9667.), 9669, 9695-02 and 9695-03 (* A different sensor can be set		values are for each system)
	for each system.)		* The instantaneous value for interval output.
VT (PT) and CT ratio settings :	0.01 to 9999.99 (* A different CT ratio can be set for each system.)	Average value :	Voltage, current, active power, reactive power, apparent power,
Measurement start method :	Manual or time (year, month, day, hour, minute)	-	power factor, frequency, average voltage, average current, (average
Measurement stop method :	Manual, time, or timer (1 seconds to 8784 hours)		values are for each system)
Output Interval :	Standard or fast (*Maximum measurement period: 1 year)		* The average value for each interval.
	Standard interval: 1, 2, 5, 10, 15, or 30 seconds, or 1, 2, 5, 10, 15, 30,	Maximum/minimum value :	Voltage, current, active power, reactive power, apparent power,
	or 60 minutes		power factor, frequency
	Fast interval: A single waveform, or 0.1, 0.2, or 0.5 seconds		* The maximum/minimum value for each interval (no event details provided).
Data output destination :	PC card, internal memory, or printer	Integrated value :	Active power (consumption/regeneration)
	Automatically attached, or set the desired name		Reactive power (lag/lead)
	(up to 8 alphanumeric characters)		* The total value since the beginning of time series measurement, and the power volume for each interval.
Display averaging circuit :	OFF, 2, 5, 10, 20 times (for movement averaging)	Demand value :	Active power (consumption), reactive power (lag), power factor
Screen copy destination :	PC card, internal memory, or printer		* The value for each interval.
Display language settings :	Japanese, English, German, French, Italian, Chinese (Simple, Trad),	Maximum demand value :	The maximum demand value since the beginning of time series
1, 1, 1, 3, 1, 3, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,	Spanish, Korean		measurement and the time and date it occurred.
Other settings :	Reactive power measurement method selection, harmonic distortion	Harmonic :	Each harmonic order (level, content percentage, and phase angle),
· ·	selection, order display selection, backlight settings, ID settings,		total value, instantaneous value for THD-F/THD-R
	clock settings, etc.	:	Each harmonic order (level, content percentage, and phase angle),
			total value, average value for THD-F/THD-R for each interval
[File operations]		:	Each harmonic order (level, content percentage, and phase angle),
Copy file :	Copies files from the internal memory to the PC card.		total value, maximum/minimum value for THD-F/THD-R within
Load/Save selected file :	Loads/Saves the file(s) selected from the internal memory or PC card.		each interval
Delete file	Deletes the file(s) from the PC card.		(no event data provided)
Format	Initializes the PC card or internal memory.	Waveform :	Waveform (Voltage or current)
Storage format	Measurement data: CSV format	Status information :	Exceeds the voltage/current crest factor, PLL unlock, power failure,
	(binary format when using the fast interval setting)		exceeds the display limit
	Waveform data: Binary format		
	Screen data: BMP format	[Print items]	
	Settings data: CSV format	Numerical values :	Prints the data selected as the data output item (during time series
	Southern Co v Torman		measurement).
		Waveform :	Hard copy of the screen (printing of each interval not available)

External	Interface Specifications	Formulae (for single-phase 2-wire systems)
(3169-21 only) Number of output channels :	4 channels For instantaneous values: Voltage, current, average voltage, average current, Active power, reactive power, apparent power, power factor, frequency For Integrated value: Active power (consumption/regeneration) or reactive power (lag/lead) For harmonics: Each harmonic order (level, content percentage, and phase angle), total value, THD-F/THD-R	Voltage $U = \sqrt{\frac{1}{M} \sum_{S=0}^{M-I} (US)^2}$ $U: Inter-line voltage$ $I: Line current$ $M: Number of samples$ $s: Sample count$ $m: 128 samples per cycle$ Active Power $P = \frac{1}{M} \sum_{S=0}^{M-I} (US \times IS)$
Resolution : Output accuracy : Temperature characteristic :	$\pm 5 V$ DC/f.s. Polarity + 11 bits Measurement accuracy $\pm 0.2\%$ f.s. Less than $\pm 0.02\%$ f.s. C $\pm 0.02\%$ f.s. C ± 0.000 ± 0.000 f.s. For each cycle of measurement input (when a measurement item other than harmonics is set) For every 16 cycles of measurement input (when harmonics is set as the measurement item)	• Measurement is also possible using the reactive power measurement method In addition to conventional calculation methods that search for reactive power using voltage, current, and active power, you can select the reactive power measurement method, which derives reactive power directly from voltage and current values, just as with the reactive power volume measurement method used
[RS-232C]	Slot: 1 × PC Card Standard-compliant Type II Card type: Flash ATA card Compatible memory capacity: Up to 528 MB Storage content: Settings data, measurement data, screen data Printer or PC connected to an RS-232C interface Compliance: EIA RS-232C-compliant Transfer method: Asynchronous communication method, full duplex Baud rate: 2400, 9600, 19200, 38400 bps Flow control and delimiter settings possible	in large-volume power consumers. When using the reactive power measurement method: Reactive power $Q = \frac{1}{M} \sum_{s=0}^{M-1} \left\{ Us \times I(s + \frac{m}{4}) \right\}$ Apparent power $S = \sqrt{P^2 + Q^2}$ Power Power factor $PF = \frac{P}{\sqrt{P^2 + Q^2}}$ Derives reactive power directly from voltage and current values, just as with the measurement of active power. (The same measurement principle is the same as that used to determine reactive power by large-volume power consumers.)
Control output :	Start/stop control for time series measurement, data storage LOW level is output during time series measurement. A 0/5 V logic signal or a short-circuit/release contact signal	When not using the reactive power measurement method: Reactive power $Q = \sqrt{S^2 P^2}$ Calculates reactive power after calculating the apparent power using the voltage, current, and RMS values.

Operating environment :	Indoors, up to 2000m (78.74ft) ASL	Conforming standards :	Safety
Operating temperature :	0 to 40°C, 80% RH or less (non-condensating)		EN61010
and humidity			Pollution degree 2,
Storage temperature :	-10 to 50°C, 80% RH or less (non-condensating)		measurement category III (anticipated transient overvoltage 6000V
and humidity		:	EMC
Withstand voltage :	5.55 kVrms AC: Between the voltage input terminal and the 3169		EN61326
50/60 Hz for 15 sec.)	casing		EN61000-3-2, EN61000-3-3
	3.32 kVrms AC: Between the voltage input terminal and the		
	current input terminal/external interface terminal	Accessories :	voltage cord set L9438-53 (1) (1 cord each of black, red, yellow
	2.3 kVrms AC: Between the power supply and the 3169 casing		and blue), voltage cord (1), input cord label (1), operating manual
	1.39 kVrms AC: Between the power supply and the current input		(2) (Advanced edition and Quick Start Guide), CD-R (1) (RS-2320
	terminal/external interface terminal		interface operating manuals and CSV conversion Software)
Power supply voltage rating :	100 to 240 V AC, 50/60 Hz		connection cable 9441 (1) (for the 3169-21 only)
Maximum rated power :	30 VA		
Dimensions and weight :	Approx.210(8.27")W × 160(6.30") H × 60D(2.36") mm (excluding		
•	protrusions),		
	Approx.1.2 kg(42.3oz.) (3169-20, 3169-21)		

Power factor $PF = \frac{P}{S}$

Measurement accuracy (Guaranteed accuracy period : 1 year)

Voltage	Current/active power
±0.2%rdg.±0.1%f.s.	±0.2% rdg. ±0.1% f.s. + clamp-on sensor accuracy

guaranteed accuracy
Fundamental waveform range for: 45 to 66 Hz guaranteed accuracy
Display area for guaranteed accuracy

Conditions of guaranteed accuracy : After 30 minutes of warm-up, sine-wave in Temperature and humidity for: $23^{\circ}C \pm 5^{\circ}C$, less than 80% relative humidity : After 30 minutes of warm-up, sine-wave input, PF=1

■ Table of current and active power accuracy with clamp-on sensor combinations

Current rang	9694	9695-02	9660, 9695-03	9661	9669	CT9667
0.5A	±0.5%rdg.±0.3%f.s.	±0.5%rdg.±2.1%f.s	-	-	-	-
1A	±0.5%rdg.±0.2%f.s.	±0.5%rdg.±1.1%f.s	-	-	-	-
5A	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.3%f.s	±0.5%rdg.±0.5%f.s.	±0.5%rdg.±1.1%f.s.	-	-
10A	-	±0.5%rdg.±0.2%f.s	±0.5%rdg.±0.3%f.s.	±0.5%rdg.±0.6%f.s.	-	-
50A	-	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.14%f.s.	±0.5%rdg.±0.2%f.s.	-	-
100A	-	-	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.15%f.s	±1.2%rdg.±0.2%f.s.	-
200A	-	-	-	-	±1.2%rdg.±0.15%f.s.	-
500A	-	-	-	±0.5%rdg.±0.11%f.s.	-	±2.2%rdg.±0.4%f.s.
1000A	-	-	-	-	±1.2%rdg.±0.11%f.s.	_
5000A	_	_	_	_	_	±2.2%rdg.±0.4%f.s.

Reference: Accuracy of the CLAMP ON SENSORE 9694,9695-02, 9695-03, 9660, 9661, 9667, and 9669

• 9694 (rated for 5 A) : ±0.3%rdg.±0.02%f.s.

9695-02 (rated for 50 A) : ±0.3%rdg.±0.02%f.s.

9695-03 (rated for 100 A): $\pm 0.3\%$ rdg. $\pm 0.02\%$ f.s. **9660** (rated for 100 A) : $\pm 0.3\%$ rdg. $\pm 0.02\%$ f.s.

9661 (rated for 500 A) : $\pm 0.3\%$ rdg. $\pm 0.01\%$ f.s.

9669 (rated for 1000 A): ±1.0%rdg.±0.01%f.s.

CT9667 (rated for 5000 A) : $\pm 2.0\%$ rdg. $\pm 0.3\%$ f.s. (500 A range: For 50 to 500 A input) (5000 A range: For 500 to 5000 A input)

* f.s. is the sensor's rated primary current value.

Note: The table of accuracy for different clamp-on sensor combinations indicates the measurement accuracy for each current range of the 3169-20/21. (The accuracy for each clamp-on sensor is converted and displayed according to the 3169-20/21 current measurement range.)

Apparent power accuracy : Reactive power accuracy

±1 dgt. for the calculation obtained from each measurement value When using the reactive power measurement method ±0.2% rdg. ±0.1% f.s. + clamp-on sensor accuracy

When not using the reactive power measurement method ± 1 dgt, for the calculation obtained from each measurement value

Integration accuracy : $\pm 1\ dgt.$ for the measurement accuracy of effective power, reactive power, and apparent power

Power factor accuracy : ±1 dgt. for the calculation obtained from each measurement value Frequency accuracy : ±0.5% rdg. ±1dgt.

Frequency characteristic : Fundamental waveforms up to the 50th order ±3% f.s. + measurement accuracy (of a 45- to 66-Hz fundamental waveform) Temperature characteristic

Within ±0.03% f.s./°C Effect of in-phase voltage

Within ±0.2% f.s. (600 Vrms AC, 50/60 Hz, between voltage input terminal and case) Within ±1.5% f.s. (in a magnetic field of 400 A/m rms AC, 50/60 Hz) Effect of external magnetic field:

Power factor influence :

 $\pm 1.0\%\ rdg$. (45 to 66 Hz, power factor = 0.5, for effective power measurement)

Effect of reactive factor

 $\pm 1.0\%$ rdg. (45 to 66 Hz, reactive factor = 0.5, when using the reactive power measurement method)

±10 ppm ±1 second (23°C) (within ±1.9 sec/day (23°C)) Real-time clock accuracy :

■Option Specifications

CLAMP ON SENSOR	9694	9660	9661	9669
Appearance	Cord length: 3 m (9.84ft) C € CAT III 300V	Cord length: 3 m (9.84ft) C∈ CAT III 300V	Cord length: 3 m (9.84ft) C € CAT III 600V	Cord length: 3 m (9.84ft) C € CAT III 600V
Primary current rating	AC 5 A	AC 100 A	AC 500 A	AC 1000 A
Output voltage	AC 10mV/A	AC 1mV/A	AC 1mV/A	AC 0.5mV/A
Accuracy Amplitude (45 to 66 Hz)	±0.3%rdg.±0.02%f.s.	±0.3%rdg.±0.02%f.s.	±0.3%rdg.±0.01%f.s.	±1.0%rdg.±0.01%f.s.
Phase (45 Hz to 5 kHz)	Within ±2°	Within ±1°	Within ±0.5°	Within ±1°
Frequency characteristic	Frequency characteristic Within ±1.0% at 40 Hz to 5 kHz (deviation from accuracy)		Within ±2.0% at 40 Hz to 5 kHz (deviation from accuracy)	
Effect of external magnetic field	external magnetic field Equivalent to 0.1 A or less (with a magnetic field of 400 A/m AC)		Equivalent to 1 A or less (with a magnetic field of 400 A/m AC)	
Effect of conductor position	Within ±0.5%		Within ±1.5%	
Maximum rated voltage to earth	300 V rms	300 V rms	600 V rms	600 V rms
Maximum input (45 to 66 Hz)	50 A continuous	130 A continuous	550 A continuous	1000 A continuous
Measurable conductor diameter	Less than φ 15 mm(0.59")	Less than φ 15 mm(0.59")	Less than φ 46 mm(1.81")	Less than φ 55 mm(2.17"), 80(3.15") × 20 (0.79")mm bus bar
Dimensions and weight	46W(1.81") × 135H(5.31") × 21D(0.83") mm, 230g(9.9oz.)	46W(1.80") × 135H(5.31") × 21D(0.83") mm, 230g(9.9oz.)	77W(3.03") × 151H(5.94") × 42D(1.65")mm, 380g(12.7oz.)	99.5W(3.92") × 188H(7.40") × 42D(1.65") mm, 590g(20.8oz.)

CLAMP ON SENSOR	CT9667	9695-02	9695-03	
Appearance	CAT III 1000V CAT IV 600V	C€ CAT II 300V	C € CAT III 300V	
Primary current rating	AC 500 A, 5000A	AC 50 A	AC 100 A	
Output voltage	AC 500 mV f.s.	AC 10 mV/A	AC 1 mV/A	
Accuracy Amplitude (45 to 66 Hz)	±2.0%rdg.±0.3%f.s. (for input 10% or more of the renge)	±0.3%rdg.±0.02%f.s.		
Phase (45 Hz to 5 kHz)	Within ±1°	Within ±2°	Within ±1°	
Frequency characteristic	Within ±3 dB at 10 Hz to 20 kHz (deviation from accuracy)	Within ±1.0% at 40 Hz to 5 kHz (deviation from accuracy)		
Effect of external magnetic field	1.5% f.s. or less. (in a magnetic field of 400 A/m AC, 50/60 Hz)	Equivalent to 0.1 A or less (with a magnetic field of 400 A/m AC)		
Effect of conductor position	Within ±3.0%	Within ±0.5%		
Maximum rated voltage to earth	1000 V rms (CAT III), 600Vrms (CAT IV)	300 V rms (insulated conductor)		
Maximum input (45 to 66 Hz)	10000 A continuous	60 A continuous	130 A continuous	
Measurable conductor diameter	Less than φ 254 mm(10.0")	Less than φ 15 mm(0.59")		
Dimensions and weight	Sensor thickness: φ13 mm (0.51") Circuit box: 35W(1.38") × 120H(4.74") × 34D(1.34") mm, 470g(16.6 oz.)	50.5W(1.99") × 58H(2.28") × 18.7D(0.74")mm, 50g(1.8oz.)		
Power supply	LR06 alkaline battery × 2 (continuous operation max. 7 days) or AC ADAPTER 9445-02/9445-03(optional)	Option : CONNECTION CABLE 9219		

Option Specifications

PRINTER 9442



Print method Paper width Print speed Power supply

Thermal serial dot printing 112 mm(4.41ft)

> AC adapter 9443-02, or supplied nickel-metal hydride battery (approx. 3000 lines of printing when full charged and used with the 9443-02)

Dimensions and weight

Approx.160W (6.30")× 66.5H(2.62") × 17D(0.67") mm, approx.580g(20.5oz.)

When purchasing the printer 9442, make sure you also purchase the RS-232C cable 9721 and AC adapter 9443-02 so that you can connect it to the 3169-

RS-232C CABLE 9721



Cord length for connecting to the 9442: 1.5 m(4.92ft)

AC ADAPTER 9443-02



CONNECTION CABLE 9440

For external I/O



Cord length: 2m(2.65ft)



CONNECTION CABLE 9441



Cord length: 2 m(2.65ft)

PC CARD 9728



Use only PC Cards (9728) sold by HIOKI.

Models 9729 1G PC Card and 9780 2G PC Card are not compatible with this

9804-02

MAGNETIC ADAPTER 9804-01, 02

Magnetic tip for use with the standard Voltage Cord L9438-53

(generally compatible with M6 pan screws)

Red and black adapters sold separately. Purchase the quantity and color appropriate for your application. 3P3W - 3 adapters; 3P4W

CLAMP ON ADAPTER 9290-10

Cord length: 3 m(9.84ft)

CONNECTION CABLE 9219 For connection to the 9695-02, 9695-03



Max. 1500 A AC (continuous: 1000 A) Measurable conductor diameter:
Bus bar: \$\\$\\$55 \text{ mm}(2.17"), \text{ width } 80 \text{ mm}(3.46")\$
CT ratio: \$10:1

Used for expanding the measurement ranges of the 9660 and



Cord length: 3 m(9.84ft)

CARRYING CASE 9720-01

A soft type case for storing the 3169-20/21 and its accessories, such as the clamp-on sen-

Approx. $445W(17.52") \times 340H(13.39") \times 150D(5.91")$ mm, Dimensions and weight

approx. 2.2 kg(77.6oz.)



CLAMP ON POWER HITESTER 3169-20

(supplied with the voltage cord L9438-53 (1), and power cord (1))

CLAMP ON POWER HITESTER

3169-21 (with D/A output)

(supplied with the voltage cord L9438-53 (1), connection cable 9441 (1) and power cord (1))

Accessory Specifications

VOLTAGE CORD L9438-53 (1 cord each of black, red, yellow, and blue, cord length: 3 m(9.84ft)) CONNECTION CABLE 9441 (D/A output cable, supplied with the 3169-21)

Current and power cannot be measured using the CLAMP ON POWER HiTESTER 3169-20/21 on its own. To perform current and power measurement, make sure you also purchase a CLAMP ON SENSOR (9694, 9660, 9661, CT9667, or 9669) (sold separately).

Use only PC Cards (9728) sold by HIOKI.

Compatibility and performance are not guaranteed for PC cards made by other manufacturers You may be unable to read from or save data to such cards.

Combination examples

For single-phase 2-wire systems (one system) : $3169-20 + 9660(100A) \times 1 + 9728$ (512MB) For single-phase 3-wire systems

(one system/two single-phase 2-wire systems) For three-phase 3-wire systems (one system)

For three-phase 3-wire systems (two systems/four single-phase 2-wire systems)

For three-phase 4-wire systems (one system) : 3169-20 + 9661(500A) × 3 +9728 (512MB)

3169-20 + 9660(100A) x 2 +9728 (512MB)

3169-20 + 9661(500A) x 2 +9728 (512MB)

3169-20 + 9661(500A) × 4 +9728 (512MB)

■ Options

CLAMP ON SENSOR 9660 (AC 100A) CLAMP ON SENSOR 9661 (AC 500A)

FLEXIBLE CLAMP ON SENSOR CT9667 (AC 5000A)

CLAMP ON SENSOR 9669 (AC 1000A) CLAMP ON SENSOR 9694 (AC 5A) CLAMP ON SENSOR 9695-02 (AC 50A) **CLAMP ON SENSOR** 9695-03 (AC 100A)

CONNECTION CABLE 9219 (for connection to the 9695-02, 9695-03)

CLAMP ON ADAPTER 9290-10 (AC 1500A) CONNECTION CABLE 9440 (for external I/O) RS-232C CABLE 9612 (for connection to a PC)

PRINTER 9442

AC ADAPTER 9443-02 (for the 9442, for Europe) RS-232C CABLE 9721 (for connection to the 9442)

RECORDING PAPER 1196 (25 m(82ft)/10 rolls, for the 9442)

CARRYING CASE 9720

POWER MEASUREMENT SUPPORT SOFTWARE 9625

PC CARD 512M 9728

MAGNETIC ADAPTER (1 red adapter) 9804-01 MAGNETIC ADAPTER (1 black adapter)

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies

DISTRIBUTED BY



HIOKI E.E. CORPORATION

HEADQUARTERS:

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 **HIOKI SINGAPORE PTE. LTD.:** http://www.hioki.com/E-mail: os-com@hioki.co.jp

HIOKI (Shanghai) SALES & TRADING CO., LTD.: TEL +86-21-63910090 FAX +86-21-63910360 http://www.hioki.cn / F-mail: info@hioki.com.cn

HIOKI INDIA PRIVATE LIMITED: TEL +91-124-6590210 FAX +91-124-6460113 E-mail: hioki@hioki.in

TEL +65-6634-7677 FAX +65-6634-7477 E-mail: info-sg@hioki.com.sg

HIOKI USA CORPORATION:

 HIOKI USA CORPORATION:

 TEL +1-609-409-9109
 FAX +1-609-409-9108

 http://www.hiokiusa.com / E-mail: hioki@hiokiusa.com
 HIOKI KOREA CO., LTD.:

 TEL +82-42-936-1281
 FAX +82-42-936-1284

 E-mail: hioki@hiokiusa.com
 E-mail: hioki@hiokiusa.com

 All information correct as of Jan. 15, 2014. All specifications are subject to change without notice.